

Instructions for Installation and Operation Satellite Tracking Units

Installation

Locating the Position for Installing the Unit

Important:


The Satellite Transmission Devices must be installed on an open space with clear view to sky.

Enclosure:

For installations inside an enclosure, special care must be paid to the enclosure material as not all plastics are equally transparent to high frequency radio waves.

Emplacement:

Special care is needed to when the device under or close to any metallic part that could interfere with the communication between satellites and the device. If possible, find a location where there is no obstruction above a 30° angle from where the device is installed.

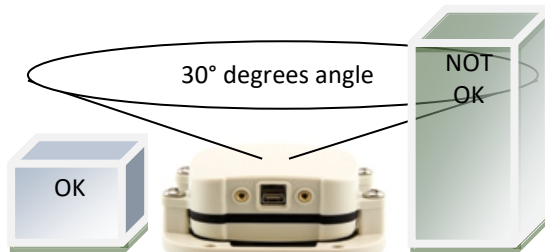


Installing / Replacing batteries:

- Unscrew the four screws holding the device to the cradle
- Unscrew the four screws holding the battery cover of the device to remove the battery cover.
- Install four new AA Energizer Ultimate Lithium Batteries 9X.

**PLEASE ONLY USE THE SPECIFIED BATTERIES
REGULAR BATTERIES DO NOT HAVE SUFFICIENT POWER.**

- Ensure that the rubber gasket is in place. Replace cover and tighten screws snugly.
- Do not overtighten the screws.

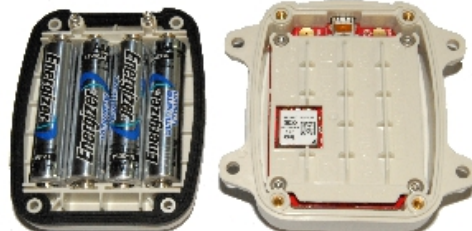

Turning ON the device for operation

- Unscrew the two small screws holding the cable connector cache.
- Using a small screwdriver or a toothpick, slide gently the mini-switch to the right, **toward the ON position.**

